

MAINTENANCE AND TROUBLESHOOTING

REPLACEMENT PARTS

Item No.	Description	Part No.
1	Glasswasher Control Kit	55042
2	Spray arm drive motor	52536
3	Wash pump	50445
4	Pump motor capacitor	52528
5	Water inlet valve	52652-1
6	Band heater	52669-1
7	Rinse aid pickup tube assembly	52626A-B
	Detergent pickup tube assembly	52626A-R
	Sanitizer pickup tube assembly	52626A-W
8	Divider side seal	52696
9	Wash water level switch	R54978-1
10	Start/Wash switch	55003-1
11	Power/drain (on/off/drain) switch	55004-1
12	Red light	54809
13	Amber light	54810
14	Wash tank filter	52492
15	Safety switch - .250" quick connect	54995-1
16	Safety switch - .187" quick connect	54996-1
17	Roller bearing for divider lock	C12698-1

Item No.	Description	Part No.
18	Glass rack	50470-2
19	Top divider seal	52692
20	Top wash tank screen (For Serial Nos. to 443593 only)	50588
20A	Top wash tank screen	R50614
21	Chemical system control board	50453
22	Drain valve	50451
23	Chemical system sight tube kit	52714A
24	Transformer	52566A
25	Temperature control	54153A
26	Fuse holder 12 amp fuse	54938-1 54939-1
27	Chemical pump gear motor	52537

PARTS NOT SHOWN

Chemical bulkhead fittings	R54976
Amber chemical sight tube light	54790
Flat strainer	54965-1
Clean-out plugs for spray arms	R54900-1
1/4" ID. chemical pump squeeze tube	52679-1
3/16" ID chemical pump squeeze tube	52681-1
1/8" ID chemical pump squeeze tube	52680-1
Seal kit	R54965

