


## INSTALLATION INTO A COUNTERTOP

1. Cut a 15<sup>1</sup>/<sub>4</sub>" (387 mm) x 15<sup>1</sup>/<sub>4</sub>" (387 mm) square hole in the countertop for the drop-in ice cream cabinet.
 

**Note:** If C27522 Dipper Well and Faucet Kit are also being installed, cut the two (2) round holes required. (Access from bottom and sides is needed to secure unit to countertop.)
2. Apply 1/4" (6 mm) diameter bead of sealant (*supplied*) to bottom outer edge of top flange as shown in cross sections.
3. Insert ice cream cabinet into opening as shown, making sure there are no voids in sealant where top flange meets countertop.
4. From underneath, install (3) hold down clips in each upper track through slots as shown in cross sections in approximate positions shown below.
5. With uniform pressure, tighten screws in hold down clips evenly to ensure a positive seal to the countertop.
6. Remove exposed excess sealant from top flange and countertop.
7. **Faucet and drain to be connected to comply with local codes.**

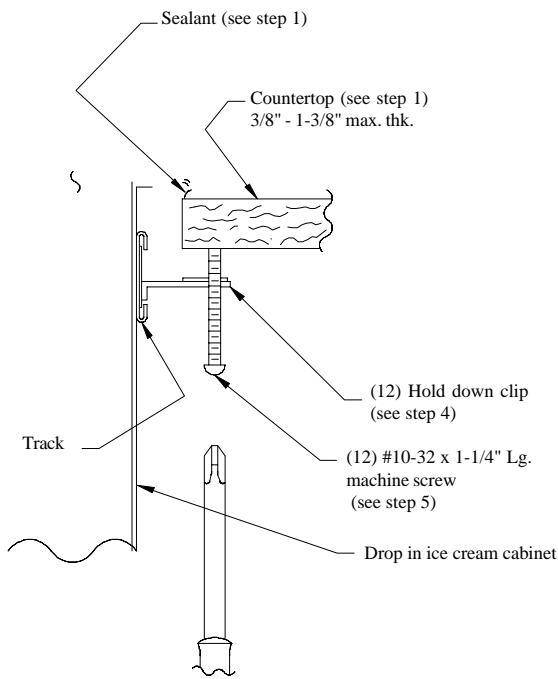

Hole through countertop for drop-in ice cream cabinet (see step 1)

