
## PERLICK ACCESSORY KIT INSTRUCTIONS FOR CR-ACC-D2N

2" TRIM KIT INSTRUCTIONS, HINGE TO HANDLE

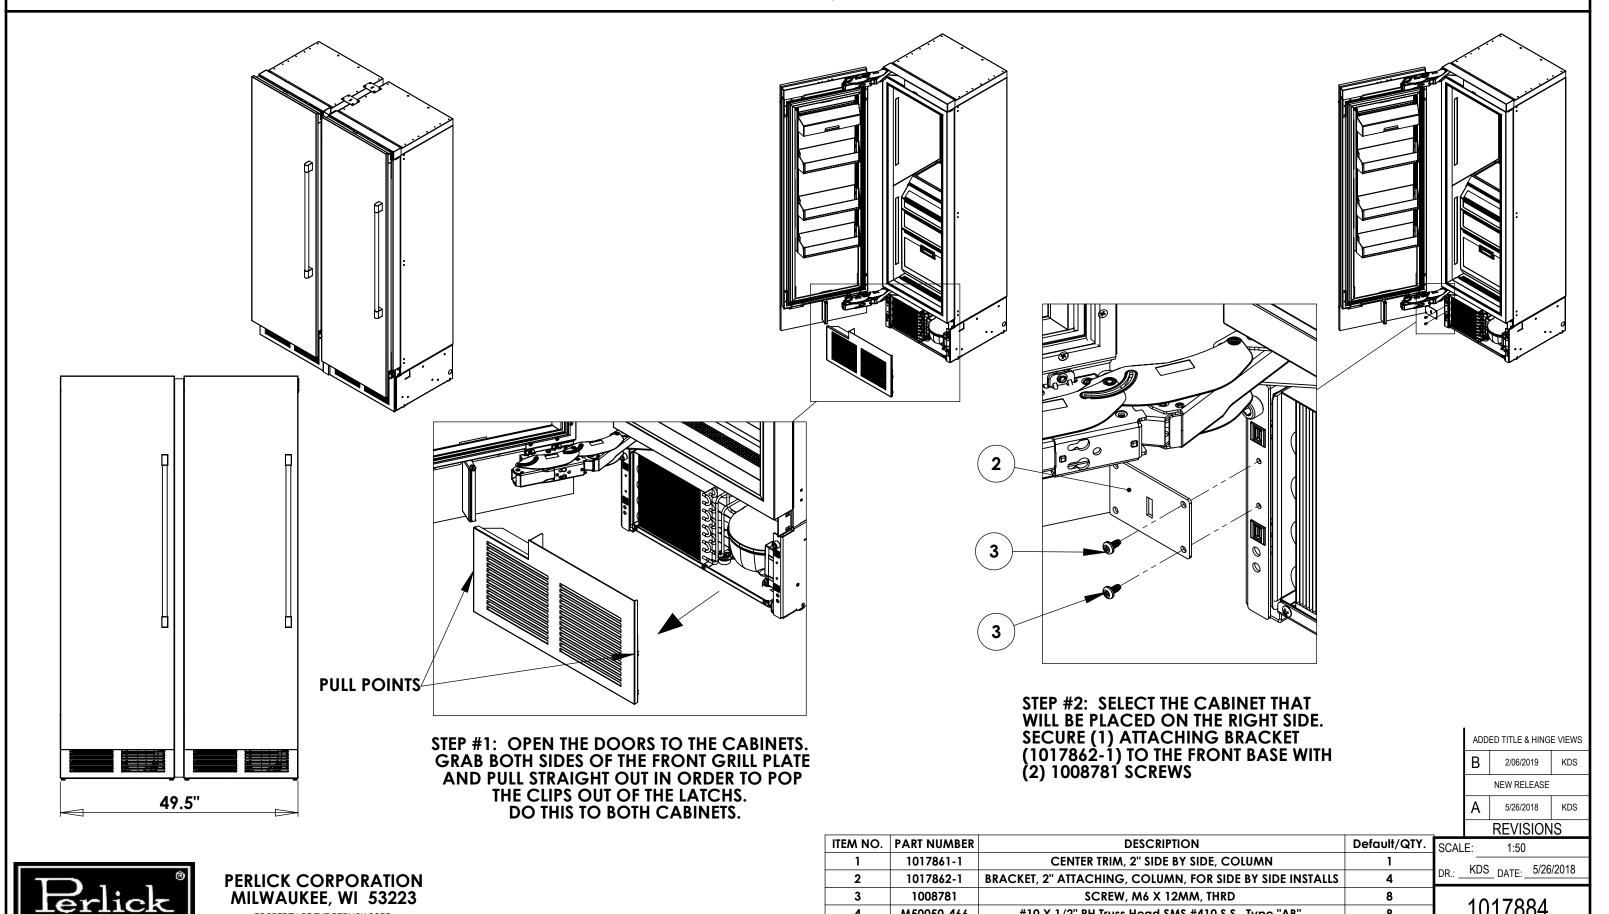

1008781

M50050-466

1010546

3

4

SCREW, M6 X 12MM, THRD

#10 X 1/2" PH Truss Head SMS #410 S.S., Type "AB",

M5x10 MACH SCR, LOW HEAD, NBK PART NO: SSH-M5-10

8


8


1017884

SHEET 1 OF 2


D:\perlick\engineering\projects\refrigeration\1601802\cad files\1017884.slddrw


MILWAUKEE, WI 53223

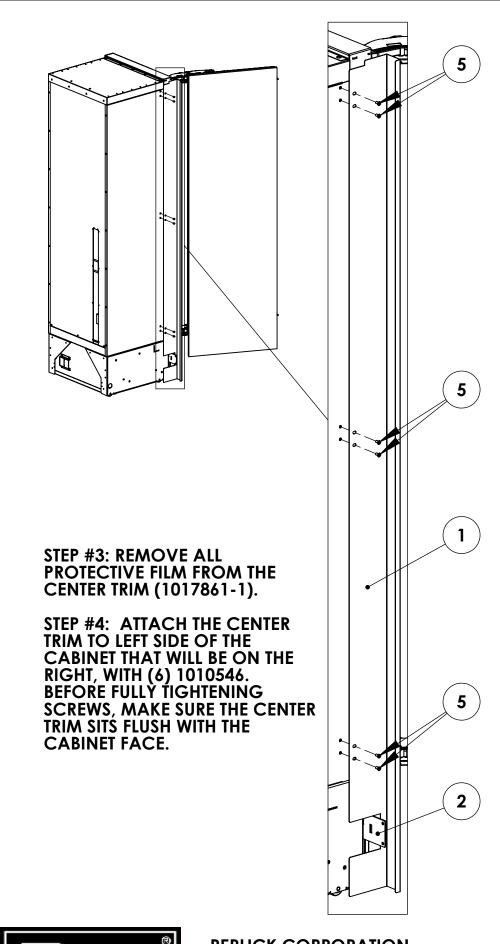


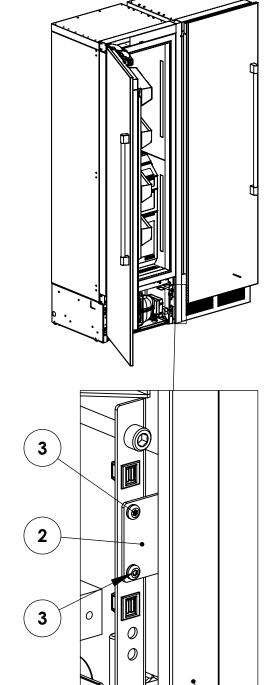

STEP #7: SECURE BOTH CABINETS TOGETHER AT THE TOP WITH (2) 1017862-1 AND (8) M50050-466

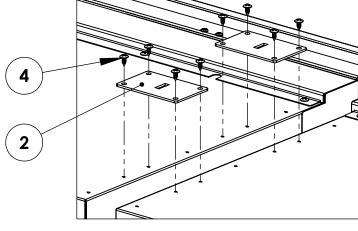

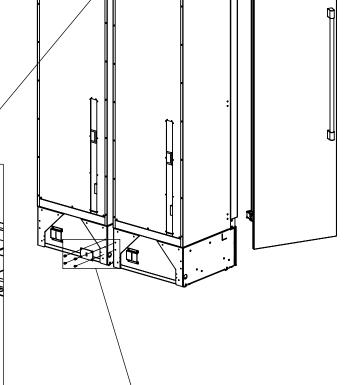

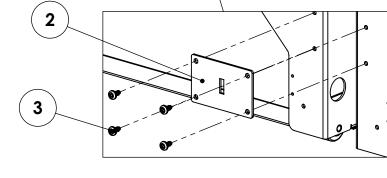

STEP #8: SECURE BOTH CABINETS TOGETHER AT THE BACK WITH (1) 1017862-1 AND (4) 1008781

STEP #9: ONCE ALL BRACKETS HAVE BEEN SECURED IN PLACE, ATTACH THE FRONT GRILLS BACK ONTO THE UNT.

Perlick®

PERLICK CORPORATION MILWAUKEE, WI 53223

PROPERTY OF THE PERLICK CORP.

STEP #6: SECURE BOTH CABINETS TOGETHER BY SECURING THE "ATTACHING BRACKET (1017862-1)," PREVIOUSLY SECURED TO THE RIGHT CABINET, TO THE LEFT CABINET WITH (2) 1008781 SCREWS.

STEP #5: MOVE BOTH CABINETS DIRECTLY NEXT

TO EACH OTHER SO THAT THE LEFT CABINET COMES IN CONTACT WITH THE CENTER TRIM.

SCALE: 1:50

DR.: KDS DATE: 5/26/2018

1017884 SHEET 2 OF 2