

# Installation & Operation Manual

Flat Top Bottle Cooler
BC Series















JOB	
AREA	
ITEM NO.	
MODEL NO.	

BC24 SERIES
BC36 SERIES
BC48 SERIES
BC48LT SERIES
BC60 SERIES
BC60LT SERIES
BC72 SERIES
BC72LT SERIES
BC96 SERIES








\* BC36 Model Only

		2550						
MODEL NUMBERS	BC24	BC36	BC48/BC48LT	BC60/BC60LT	BC72/BC72LT	BC96		
LENGTH (mm)	24" (610)	36" (915)	48" (1219)	60" (1524)	72" (1828)	96" (2438)		
INTERIOR CU. FT. (m³)	3.75 (0.10)	7.83 (0.22)	11.68 (0.33)	15.53 (0.44)	19.38 (0.55)	27.08 (0.77)		
CASE CAPACITY (12 bottles)	5.5	9.75	17.2	21	28.3	41		
CASE CAPACITY (12 cans)	7.0	16	25	30	36	58		
CONDENSING UNIT H.P.			1/4	1/4	1/3	1/3		
AMPS			5.2	7.0	6.9	7.6		
SHIPPING WEIGHT Lbs. (kg.)	190 (86)	245 (111)	300 (136)	353 (160)	405 (184)	515 (235)		
INTERIOR	All models have stainle	All models have stainless steel walls and floor.						
EXTERIOR	Choice of black, stainless steel and all stainless.  Black Option: Front and ends are black vinyl coated steel, back and bottom are galvanized.  Stainless Steel Option: Front and ends are stainless steel, back and bottom are galvanized.  All Stainless Option: Front, ends, back and bottom are all stainless steel.							
TEMPERATURE (Approx. factory settings)	38°F/Standard Model. 30°F Low-Temp Model							
DOORS (Siding)	Stainless steel top and bottom pans. Die cast handle. Option locks.							
ELECTRICAL	115V, 60Hz, 1 Phase. Fu	115V, 60Hz, 1 Phase. Furnished with 6 foot rubber plug-in cord (115V model only). Also available in 230V, 50Hz, 1 phase AC.						
PLUMBING	No drain required. Con	No drain required. Condensate evaporates automatically.						
INSULATION	2 inch foamed-in-place	2 inch foamed-in-place polyurethane insulation.						
REFRIGERATION	R134a capillary tube/type with hermetric condensing unit. Pulls out for service and cleaning.							
VENTILATION	2' model is front vented, all other models require 2" clearance from wall on either left end or back of cabinet for proper air flow.							
OPTIONAL ACCESSORIES	Floor racks     Bin dividers     Interior light kits	• Speed rails	Bottle opener and receive Wine temperature (specif Roller basket shelving					

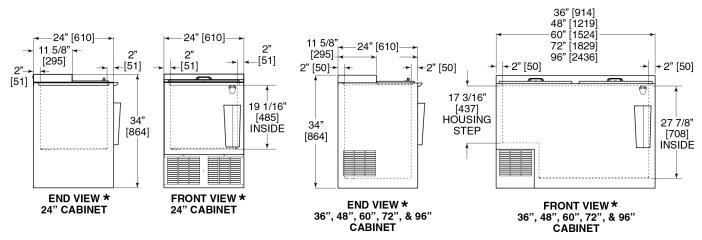

<sup>\*</sup> Shown with optional opener and receiver.



### **TABLE OF CONTENTS**

Cabinet Specifications	2
Installing	
- Uncrating and Inspection	4
- Plumbing	4
- Electrical	4
- Adjusting Partitions	
- Installing Casters and Legs	
- Placing the Cabinet	
- Sealing to the Floor	
Temperature Control	5
Cleaning the Cabinet	5
Wiring Diagrams	7/8
Replacement Parts	

# **GENERAL INFORMATION**

### Introduction

This manual has been prepared to assist you in the installation of your Bottle Cooler and to acquaint you with its operation and maintenance.

We dedicate considerable time to ensure that our products provide the highest level of customer satisfaction. If service is required, call Perlick at 1-800-777-7267 or your dealer who can provide you with a list of qualified service agents. For your own protection, never return merchandise for credit without our approval.

We thank you for selecting a Perlick product and assure you of our continuing interest in your satisfaction.

### Warranty

To register your product, visit our web site at <a href="https://www.perlick.com">www.perlick.com</a>. Click on "Commercial", then "Service". Click on the link "Warranty Registration Form". You must complete and submit this form or the installation date will revert back to the ship date.

Please record the purchase date and the dealer's name, address and telephone number below.

Model Number:	
Serial Number:	
Purchase Date:	
Dealer Name & A	Address
	3
Phone Number	

### SAFETY

PLEASE READ all instructions completely before attempting to install or operate the unit. Take particular note of the DANGER, WARNING an CAUTION information in the manual. The information is important for the safe and efficient installation, operation and care of your Perlick unit.

Indicates a hazard that WILL result in serious injury or death if precautions are not followed.

A WARNING Indicates a hazard MAY cause serious injury or death if precautions are not followed.

A CAUTION Indicates a hazard where minor injury or product damage may occur if precautions are not followed.

### **IMPORTANT!**

Read and understand all information in this manual before attempting the installation.

All plumbing and electrical work must be performed by a qualified technician and conform to all applicable state and local codes.



### PREPARING THE CABINET - FLAT TOP BOTTLE COOLERS

### **Uncrating and Inspection**

Remove all crating material. Carefully inspect cabinet for hidden damage. If damage is discovered, file your claim immediately with the transport company. Perlick is not responsible for damage in transit.

### **Plumbing**

No plumbing connections are required. Condensate from the cooling coil automatically evaporated through a condensate pan located in the condensing unit section.

### **Electrical**

The cabinet must be connected to a separately fused power source (see Electrical Specification Plate affixed to unit) in accordance with National and Local electrical codes.

**CAUTION** Do not attempt to operate the equipment on any other power source than that listed on the Electrical Specification Plate.

### **Adjustable Partitions & Shelving**

Perlick Bottle Coolers may be provided with adjustable partitions and shelving which will accommodate various bottle sizes.

- Remove bottles and cans from their cases before placing in cooler to ensure proper air flow.
- On 2' and 3' models keep air intake open for proper circulation.

### Installing Casters or Legs (optional)

Attach casters or legs to the cabinet bottom in holes provided. Use the supplied 1/4" - 20 hex head self-tapping machine screws. If unit is tipped on its back for an extended period of time, wait 24 hours after unit is uprighted to plug the unit in.

### **Placing the Cabinet**

To assure maximum performance, fresh air must be allowed to circulate through the machinery compartment. It is important to allow at least two inched of clearance at the back or left end of the cabinet. Do not place anything in front of the cabinet that would obstruct air flow at these grilles. Do not place the unit in an unventilated small room.

Removing the factory installed back clearance spacers without providing proper left side grill clearance for compressor air flow will void the warranty.

Cabinet should be leveled.

For sanitation purposes, it may be necessary to seal the base of the cabinet to the floor. This can be accomplished by laying a bead of silicone sealant along the base of the cabinet as shown by the figure below (figure 1).

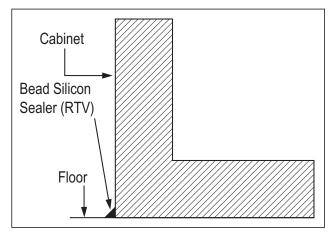


Figure 1. Sealing Cabinet to Floor



# **HOW TO OPERATE - FLAT TOP BOTTLE COOLERS**

### **Temperature Control**

An adjustable temperature control is located inside the Bottle Cooler on the evaporator fan panel assembly. It is factory set at approximately 38°F for standard refrigeration and approximately 30°F for low temperature models. Make adjustments as detailed below to attain the desired temperature. NOTE: A temperature setting that is too low will not allow enough condensing unit "off" time to maintain a frost-free coil.

- Colder Temperatures: Turn the adjusting screw clockwise (to the right)
- Warmer Temperatures: Turn the adjusting screw counterclockwise (to the left).
- Temperature Control "OFF": Turn the adjusting screw completely counterclockwise to the "O" position until a "click" is noted.

The condenser fan motor turns off and on with compressor. The evaporator fan motor runs continuously.

# **Cleaning the Condenser**

■ The condenser (located behind the from grille) should be inspected every 30 days, and cleaned, if necessary. Failure to keep the condenser clean will cause a loss in condensing unit efficiency, or compressor failure.

### **Cleaning the Doors**

Doors should be periodically removed from the cabinet and inspected for a buildup of foreign materials, such as syrups, beer, etc. Buildups on the underside of the doors, along with the cabinet breaker strips on which they ride, will cause them to bind, and therefore, not function as designed. If dirty, these surfaces should be cleaned with a mild detergent and water and then coated with a silicone lubricating material. Aerosol silicone sprays can be obtained locally at most hardware or automotive stores.

### To remove doors:

■ With door closed, lift it upward by its handle and slide forward until doors clears the cabinet top. Use the reverse procedure to reinstall the doors.

# **Cleaning the Cabinets**

■ Use a damp cloth with a mild detergent and water to clean the inside and outside of the cabinet. Dry thoroughly. Do not allow cleaning agents or large amounts of water to go down the drain. Use an acceptable stainless steel polish to clean all stainless steel surfaces. Never use steel wool or scouring pads to clean stainless steel.

### **Avoiding Stainless Steel Corrosion**


Corrosion can be prevented by following product cautions, cleaning instructions and avoiding use of certain chemicals or objects which will cause stainless steel corrosion.

### STAINLESS STEEL ENEMY

- Steel wool or steel scouring pads
- Cherry/Orange/Olive juice
- Chlorine Bleach
- Sharp Objects




# **WIRING DIAGRAM - FLAT TOP BOTTLE COOLERS**

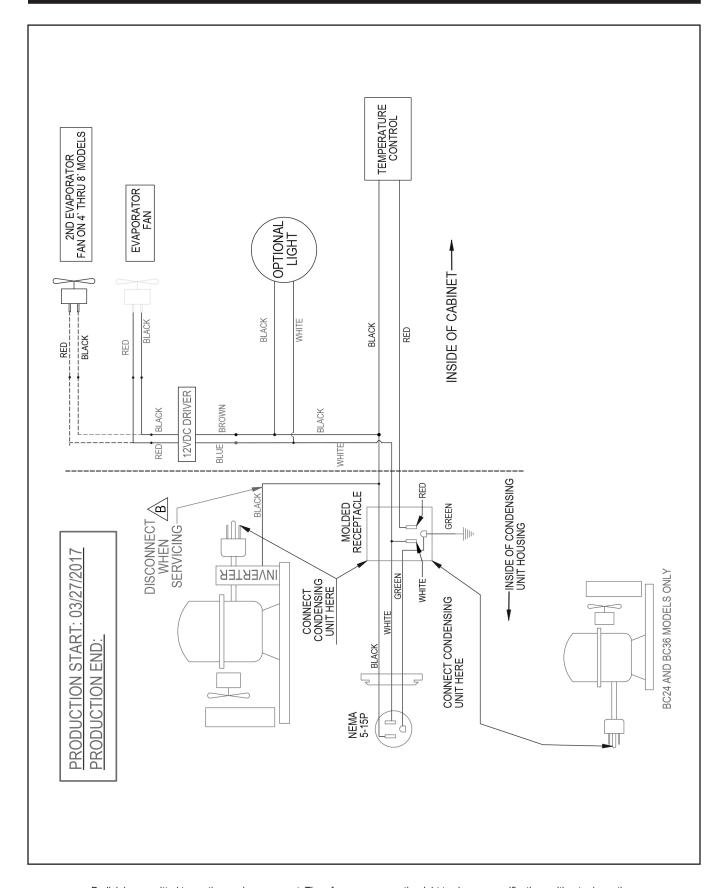




# **WIRING DIAGRAM - LOW-TEMP BOTTLE COOLERS**

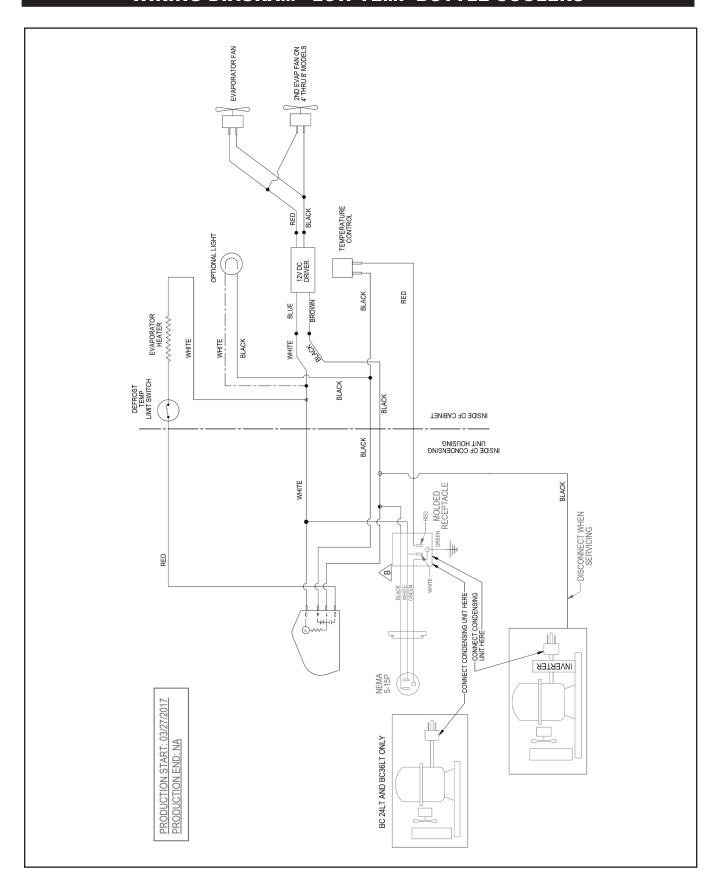



# **REPLACEMENT PARTS - FLAT TOP BOTTLE COOLERS**

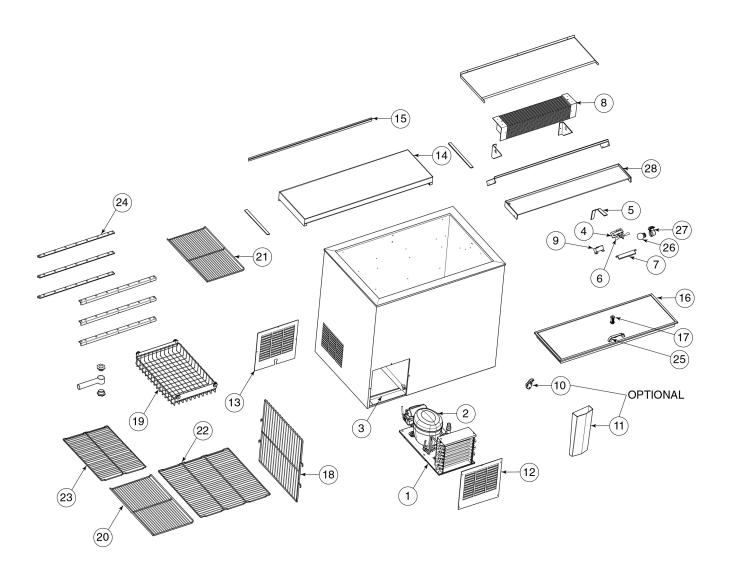

# CAUTION

- Service should be done by a qualified refrigeration technician.
- Disconnect all power before servicing the cabinet.



# **REPLACEMENT PARTS - FLAT TOP BOTTLE COOLERS**

MODEL NOS.		BC24	BC36	BC48/ BC48LT	BC60/ BC60LT	BC72/ BC72LT	BC96	
Item	Description	Part Numbers						
1	Complete condensing unit	C22648	C22648	C22647	C22646	C22646	C22646	
2	Replacement compressor, R134a	513307046	513307046	513200314UA2	513200003	513200003	513200003	
	Condensing unit fan motor assy.	515315009	515315009	515315009	515315009	515315009	515315009	
	Terminal Board	519100088	519100088	519100088	519100088	519100088	519100088	
	Overload Protector	513634530	513634530	US-PB10HBX1	US-PB12HBX1	US-PB12HBX1	US-PB12HBX	
	Relay	513514069	513514069	US-PB10HBX1	US-PB12HBX1	US-PB12HBX1	US-PB12HBX	
	Start capacitor	N/A	N/A	US-PB10HBX1	US-PB12HBX1	US-PB12HBX1	US-PB12HBX	
3	Condensate pan	64537	64626-1	64626-1	64626-1	64626-1	64626-1	
4	Evaporator fan motor(s)	C15239A	C15239A	C15239A	C15239A	C15239A	C15239A	
5	Evaporator fan motor bracket	65671-1	65671-1	60988-1	60988-1	60988-1	60988-1	
6	Evaporator fan motor blade	63461	63461	57699	57699	57699	57699	
7	Evaporator fan guard	65666	65666	65557	65557	65557	65557	
8	Evaporator coil	64785-1EP	C17511-1EP	C17511-1EP	C17511-2EP	C17511-2EP	C17511-2EP	
9	Temperature control	61283	61283	61283	61283	61283	61283	
10	Bottle opener	C6713-1	C6713-1	C6713-1	C6713-1	C6713-1	C6713-1	
11	Bottle cap receiver	C17332SS	C17332SS	C17332SS	C17332SS	C17332SS	C17332SS	
12	Front grille	66498-3A	65662-1A	65662-A1	65662-1A	65662-1A	65662-1A	
13	Rear grille/panel	66498-1	65662-3	65662-3	65662-3	65662-3	65662-3	
14	Top assembly	RT-SL2	RT-SL2	RT-SL2	RT-SL2	RT-SL2	RT-SL2	
15	Top wiper gasket	63671-24	63671-36	63671-48	63671-60	63671-72	63671-96	
16	Door assembly	RD-SL2	RD-SL2	RD-SL2	RD-SL2	RD-SL2	RD-SL2	
17	Lock assembly	63940	63940	63940	63940	63940	63940	
18	Vertical partition	65503	66441	66441	66441	66441	66441	
19	Roller basket	N/A	66442-1	66442-1	66442-1	66442-1	66442-1	
20	Wide shelf	N/A	64811-1	64811-1	64811-1	64811-1	64811-1	
21	Narrow shelf	64809-1	64809-1	64809-1	64809-1	64809-1	64809-1	
22	Bottom floor rack (wide)	64814-1	64814-1	64814-1	64814-1	64814-1	64814-1	
23	Bottom floor rack (narrow)	N/A	N/A	64815-1	64815-1	64815-1	N/A	
24	Shalf bracket	65653-24	65653-36	65653-48	65653-60	65653-72	65653-96	
25	Door handle	63931	63931	63931	63931	63931	63931	
26	Light Bulb	C15046	C15046	C15046	C15046	C15046	C15046	
27	Light socket	63484	63484	63484	63484	63484	63484	
28	Evaporator drain pan	65670-24	65670-36	65526-1SL	65526-2SL	65526-2SL	65526-2SL	
	ITEMS NOT SHOWN							
	Wire harness, main	65043-1	65043-1	65044-1	65044-1	65044-1	65044-1	
	Suction line/cup tube heat exchanger with drier	65072	65072	65073	65075	65074	65220	
	Mullion assembly	N/A	N/A	66551	66551	66551	66551	
	Refrigerant charge (oz. R134a)	6.0	8.5	9.0	9.0	9.0	9.0	
	<u> </u>	1	L	1	l .	1	L	









8300 West Good Hope Road • Milwaukee, WI 53223 • Toll Free 800.558.5592 • Fax 414.353.7069 • www.perlick.com